



Motion detection alerts



See every detail with 4x digital zoom



WPS and mobile app for easy setup



mydlink® apps for remote viewing



DCS-930L WI-FI CAMERA

Features

Premium Resolution and Visibility

- High quality VGA CMOS sensor for excellent image quality
- 4x digital zoom for close-up viewing
- Built-in microphone¹

Security

- Motion detection triggers e-mail/push alert notifications
- Save snapshots to your mobile device

Ease of Use

- Uses the Wireless N technology so you can install the camera anywhere with ease
- WPS support for easy wireless connection
- UPnP & DDNS support

Convenient Control with mydlink® Support

- mydlink app support for iPhone, iPad, Android and Windows phone
- mydlink portal for easy viewing and management

Overview

The Wi-Fi Camera (DCS-930L) is a complete surveillance solution for your home or small office. It can connect to your network using Wireless N, so you can place it anywhere in your home, and it even includes motion detection. The DCS-930L is a standalone surveillance camera that requires no special hardware or software, and can run independently even without a PC. Send e-mail notifications with snapshots whenever motion is detected using just the DCS-930L and an Internet connection. You can even customize areas of the video to monitor for motion to keep watch over entryways or sensitive areas of a room.

Convenient Access Anytime, Anywhere with mydlink®

Enhanced with mydlink® support, the Wi-Fi Camera makes it easy and convenient for you to look after your family, pets, home or small business. With a mydlink enabled camera, you can stay connected to everything you love from anywhere, anytime. Access your camera through the mydlink mobile app or website to view and manage your camera through your smartphone, tablet, laptop or desktop, no matter where you are.




Do-It-Yourself
Simple




No Installation
Fees



No Monthly
Charges

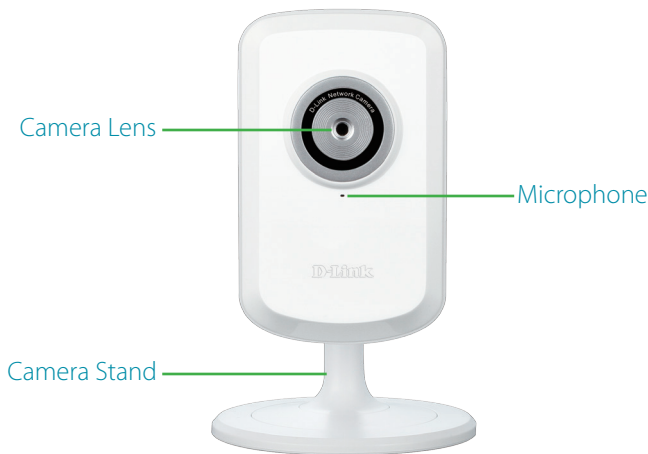

Front View

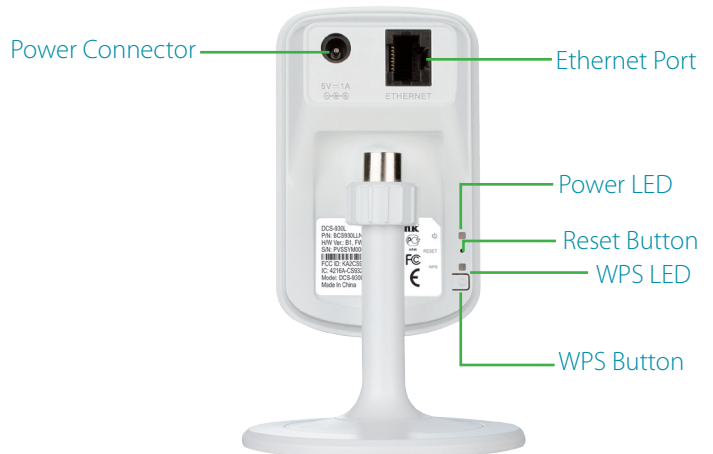

Back View

Technical Specifications

Camera

Hardware Profile	<ul style="list-style-type: none"> • 1/5"VGA progressive CMOS sensor • 1 lux with IR LEDs on • 4x digital zoom • Focal length: 3.15 mm • Aperture: F2.8 • Exposure time: 1/3.75-1/14,640 sec. 	<ul style="list-style-type: none"> • Angle of view: <ul style="list-style-type: none"> • (H) 45.3° • (V) 34.5° • (D) 54.9° • Built-in microphone
Image Features	<ul style="list-style-type: none"> • Adjustable image size, quality, frame rate and bit rate • Configurable brightness, saturation and contrast 	<ul style="list-style-type: none"> • Configurable motion detection windows • Time stamp and text overlays
Video Compression	<ul style="list-style-type: none"> • MJPEG format compression 	<ul style="list-style-type: none"> • JPEG for still images
Video Resolution	<ul style="list-style-type: none"> • 640 x 480 at up to 20 fps 	<ul style="list-style-type: none"> • 320 x 240 at up to 30 fps
Audio	<ul style="list-style-type: none"> • PCM 	
External Device Interface	<ul style="list-style-type: none"> • Power Connector • 10/100Base-T Ethernet • Power L:ED 	<ul style="list-style-type: none"> • WPS LED • WPS Button • Reset Button

Network

Network Protocols	<ul style="list-style-type: none"> • IPV4, ARP, TCP, UDP, ICMP • DHCP Client • NTP Client (D-Link) • DNS Client • DDNS Client (D-Link) • SMTP Client 	<ul style="list-style-type: none"> • FTP Client • HTTP Server • PPPoE • UPnP Port Forwarding • LLTD
Security	<ul style="list-style-type: none"> • Password authentication 	<ul style="list-style-type: none"> • HTTP digest encryption
Wireless Connectivity	<ul style="list-style-type: none"> • 802.11n/g/b wireless with WEP/WPA/WPA2 encryption 	<ul style="list-style-type: none"> • Operates on 2.4GHz frequency band

System Integration

System Requirements for Web Interfaces	<ul style="list-style-type: none"> • Operating system: Microsoft Windows 8/7/Vista² or Mac OS X 10.6 and above 	<ul style="list-style-type: none"> • Browser: Internet Explorer 7, Firefox 12 or above, Safari 6 or above, Chrome 20 or higher with Java installed and enabled
Event Management	<ul style="list-style-type: none"> • Motion detection 	<ul style="list-style-type: none"> • Event notification and uploading of snapshots via SMTP

Remote Access	
Remote Management	<ul style="list-style-type: none"> Configuration accessible via web browser
Mobile Support	<ul style="list-style-type: none"> mydlink Lite app for iOS, Android and Windows Phones mydlink+ app for iOS and Android
General	
Weight	<ul style="list-style-type: none"> 0.18 lbs
Power	<ul style="list-style-type: none"> 5 V DC 1 A, 50/60 Hz
Power Consumption	<ul style="list-style-type: none"> 1.84 watts maximum
Temperature	<ul style="list-style-type: none"> Operating: 32 to 104 °F (0 to 40 °C) Storage: -4 to 158 °F (-20 to 70 °C)
Humidity	<ul style="list-style-type: none"> Operating: 20% to 80% non-condensing Storage: 5% to 95% non-condensing
Certifications	<ul style="list-style-type: none"> CE IC FCC Class B C-Tick
Dimensions	<ul style="list-style-type: none"> 3.15 x 4.98 x 3.15 inches
Package Contents	<ul style="list-style-type: none"> Wi-Fi Camera (DCS-930L) Power adapter Ethernet cable Quick install guide
Warranty Information	<ul style="list-style-type: none"> 1 Year Limited Warranty
Order Information	
Part Number	Description
DCS-930L	Wi-Fi Camera


¹ Use of audio or video equipment for recording the image or audio of a person without their knowledge and consent is prohibited in certain states or jurisdictions. The end-user assumes all liability for compliance with applicable state, local and federal laws.

² Computer must adhere to Microsoft's recommended system requirements.

For more information

U.S.A. | 17595 Mt. Herrmann Street | Fountain Valley, CA 92708 | 800.326.1688 | dlink.com

©2015 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link, the D-Link logo, mydlink and the D-link RoHS logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States and/or other countries. Other trademarks or registered trademarks are the property of their respective owners. iPhone and iPad are registered trademarks of Apple Inc. Android is a trademark of Google Inc. Windows is a registered trademark of Microsoft Inc.



mydlink Lite only

Updated August 2015

D-Link[®]